


1.the right connection(**the STB no need plug in the power**)

Find a RS232 cable and make the connect as below.

 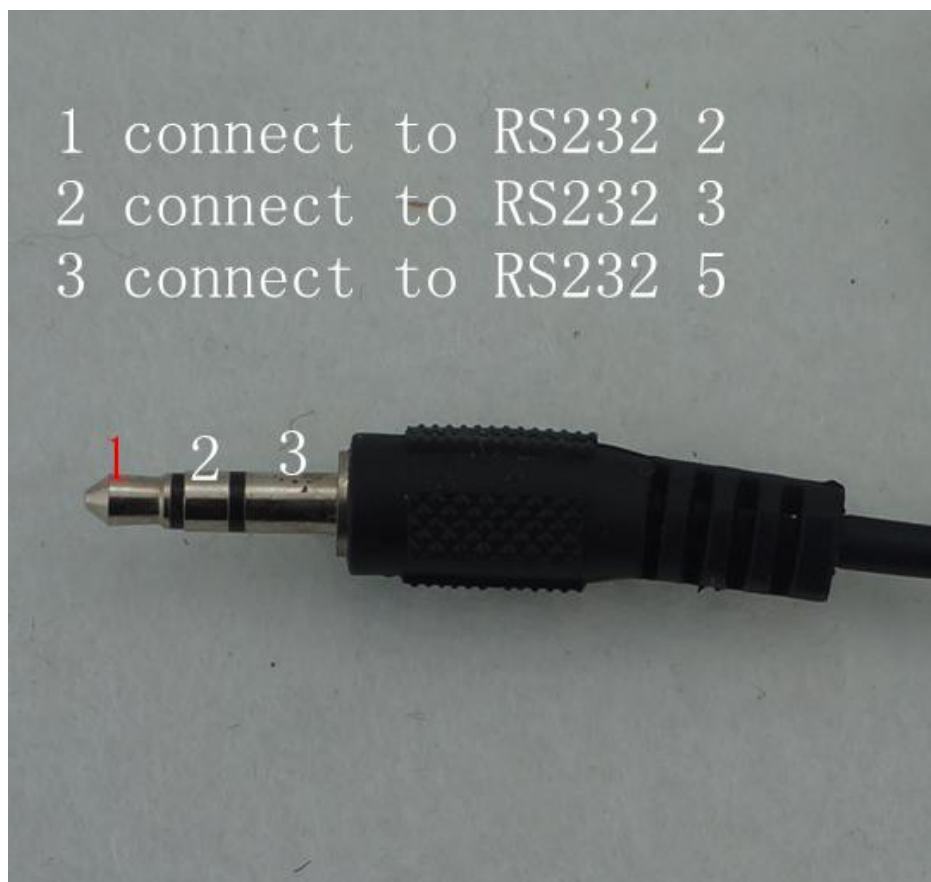


If not work (after trying if not work switch the connect 1 and 2).

2. make the STB connect to computer by RS232.




3. open the update tool




Choose:


Choose the port and click the "OPEN"

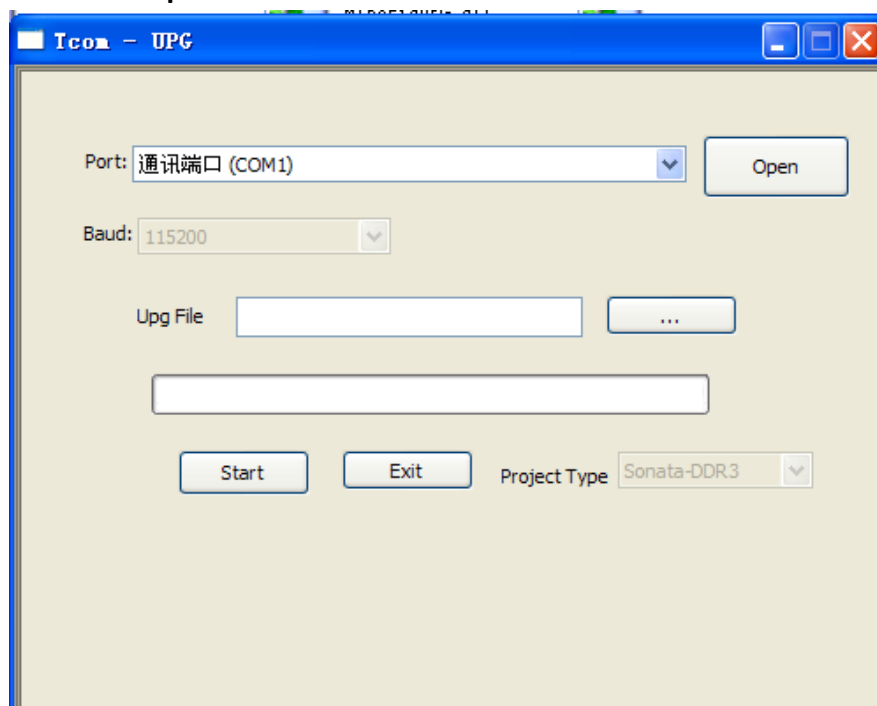

Choose the **Upg file** which needs burning according to RS232

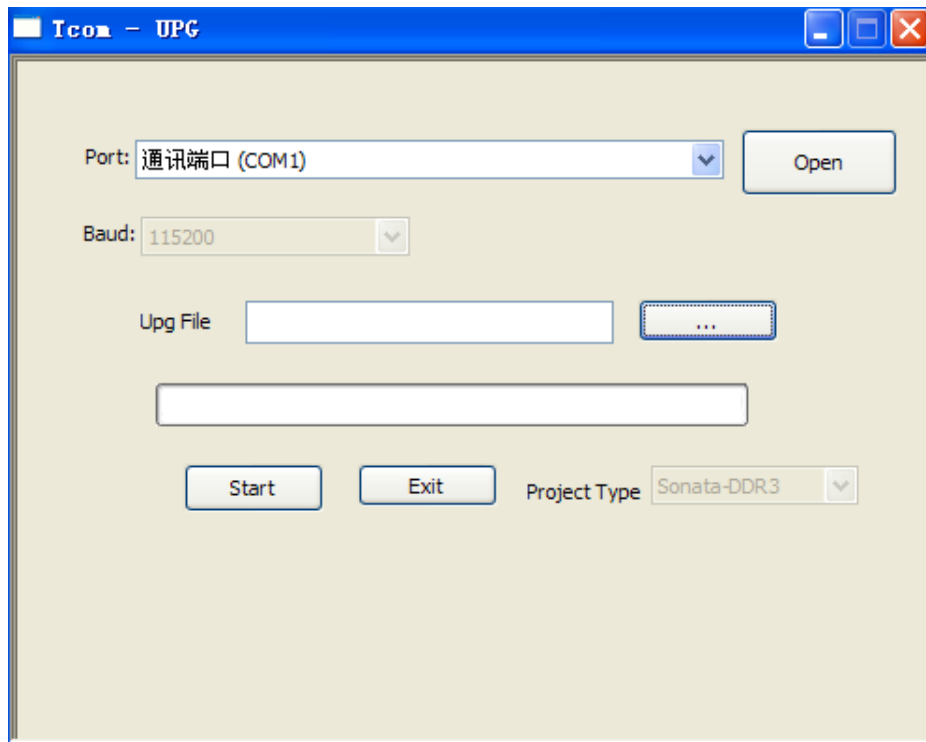

Press the **Start**

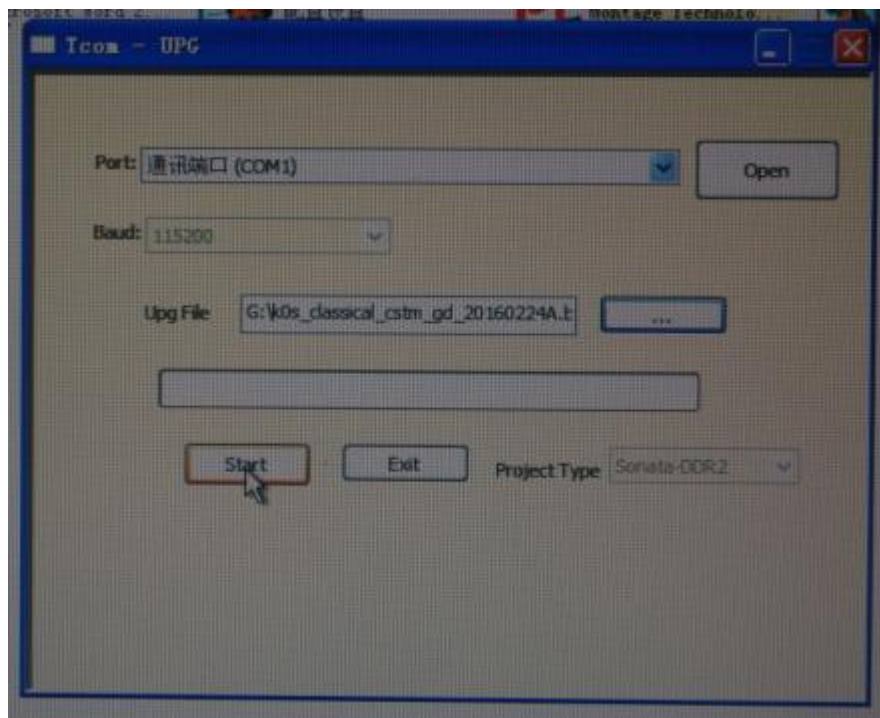

4. plug in the power to the STB and waiting for the upgrading.

PS: if the upgrade not start pls check the RS232 connect with

**the socket and change the No1 and No2 connection to the
RS232**